



Ölfiltermodul PTA421-0001


MONTAGEHINWEIS

ACHTUNG!

Beim Einbau des neuen Ölfiltermoduls wie folgt vorgehen:

1. Dichtungen, Dichtringe und O-Ringe ersetzen.
Luftführungsrohre und Schlauchstutzen müssen vor Montage fett- und ölfrei sein.
2. Befestigungsschrauben nach Demontage ersetzen.
3. Zuerst die Befestigungsschrauben oben links und unten rechts ansetzen.
4. Anzugsreihenfolge zwingend einhalten (siehe Abbildung unten).

Anzugsmoment Befestigungsschrauben 14 Nm + 180 °

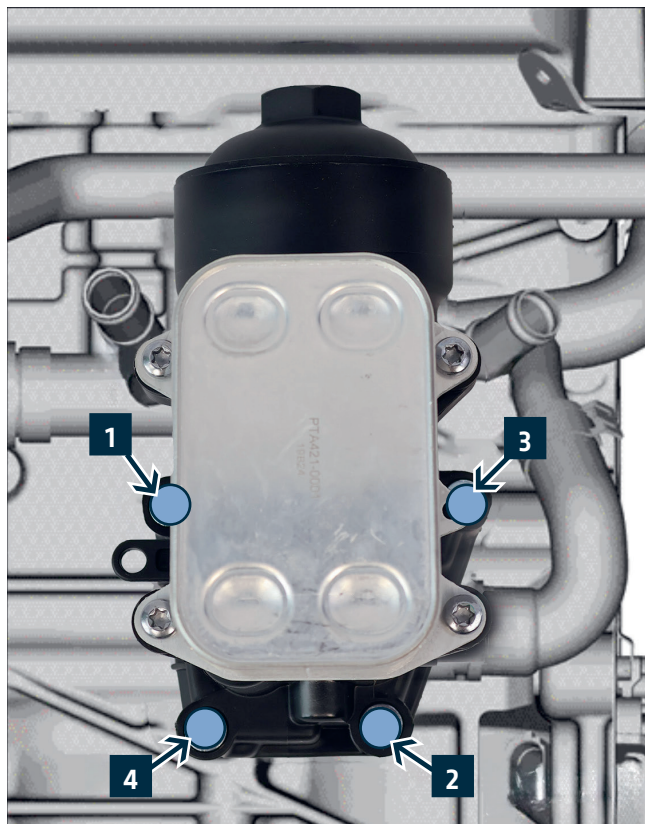

Kühlmittel auffüllen bzw. wechseln, wenn der Motorkühler ersetzt wird.

Bei allen Arbeiten sind die herstellerspezifischen Reparaturanweisungen zwingend einzuhalten.



Oil filter module PTA421-0001


INSTALLATION INSTRUCTIONS

ATTENTION!

Proceed as follows to install the new oil filter module:

1. Replace seals, gaskets and O-rings.
Air ducts and hose connectors must be free of grease and oil before installation.
2. Replace fixing screws after removal.
3. First fit the fixing screws at the top left and bottom right.
4. It is essential to adhere to the tightening sequence (see illustration below).

Tightening torque for fixing screws 14 Nm + 180 °

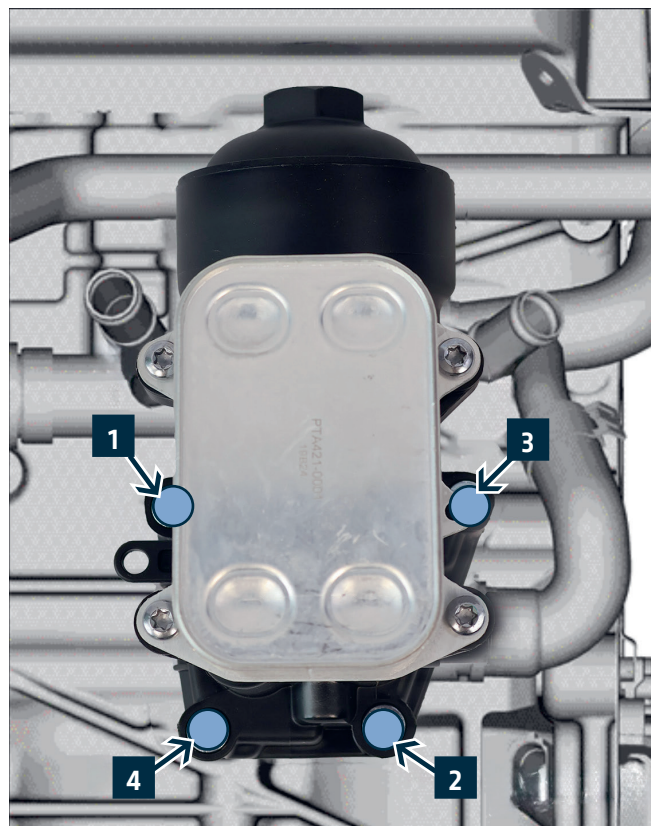

Top up or change the coolant when replacing the engine radiator.

The manufacturer-specific repair instructions must be observed for all work.